

## Programming Chart PCS V 6 Wilma

Keep button pressed for	LED	Release button	LED	Selected mode	Selected by	Exit programming
5 seconds	---	<b>SOS Function</b>		LED flashes SOS or Alpin emergency Signal or Superflash		press button
10 seconds	<b>red LED</b> lights	<b>Setup Dimm-level</b>	<b>red LED</b> lights for 5 sec. <b>yellow LED</b> lights for 5 sec. <b>green LED</b> lights for 5 sec. <b>blue LED</b> lights for 5 sec.	On-Off 2 step 3 step stepless level	press button press button press button press button	automatically see low level automatically automatically
		↓				
		if 2 step dimming was selected	<b>red LED</b> lights for 5 sec. <b>yellow LED</b> lights for 5 sec. <b>green LED</b> lights for 5 sec. <b>blue LED</b> lights for 5 sec.	12% 40% 60% 75%	press button press button press button press button	automatically automatically automatically automatically
15 seconds	<b>yellow LED</b> lights	<b>Setup capacity control</b>	<b>red LED</b> lights for 5 sec. <b>yellow LED</b> lights for 5 sec. <b>green LED</b> lights for 5 sec.	Low Middle High	press button press button press button	automatically automatically automatically
20 seconds	<b>green LED</b> lights	<b>Setup Power</b>	<b>red LED</b> lights for 5 sec. <b>yellow LED</b> lights for 5 sec. <b>green LED</b> lights for 5 sec.	Economy-Modus 8 W Normal-Modus 10 W Power-Modus 12 W	press button press button press button	automatically automatically automatically
25 seconds	<b>blue LED</b> lights	<b>Setup SOS</b>	<b>red LED</b> lights for 5 sec. <b>yellow LED</b> lights for 5 sec. <b>green LED</b> lights for 5 sec.	SOS alpine emergency Superflash	press button press button press button	automatically automatically automatically
= factory defaults						