

Programming Chart PCS V 7.1 Wilma / Betty

Keep button pressed for	LED	Release button	LED	Selected mode	Selected by	Exit programming
5 seconds		SOS Function		LED flashes SOS or Alpine emergency Signal or Superflash		press button
10 seconds	red LED lights	Setup Dim-level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.	3 step with RVLr superflash mode 2 step 3 step stepless level	press button press button press button press button	automatically jump to low level jump to mid level automatically
		if 2 step dimming was selected				
		low dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.	low beam = Betty 1% / Wilma 2% low beam = 5% low beam = 40% low beam = 60%	press button press button press button press button	automatically automatically automatically automatically
		if 3 step dimming was selected				
		mid dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.	low beam = Betty 1% / Wilma 2% low beam = 5% low beam = 40% low beam = 60%	press button press button press button press button	automatically automatically automatically automatically
		low dim level	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec. blue LED lights for 5 sec.	low beam = Betty 1% / Wilma 2% low beam = 5% low beam = 40% low beam = 60%	press button press button press button press button	automatically automatically automatically automatically
15 seconds	yellow LED lights	Setup capacity control	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.	Low Middle High	press button press button press button	automatically automatically automatically
20 seconds	green LED lights	Setup Power	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.	Econo = Betty 13 W / Wilma 10 W Normal = Betty 17 W / Wilma 12 W Power = Betty 22 W / Wilma 15 W	press button press button press button	automatically automatically automatically
25 seconds	blue LED lights	Setup SOS	red LED lights for 5 sec. yellow LED lights for 5 sec. green LED lights for 5 sec.	SOS alpine emergency Superflash	press button press button press button	automatically automatically automatically
= factory defaults						