

Programming Chart PCS V 8 Wilma

<u>Keep button pressed for</u>	<u>LED</u>	<u>Release button</u>	<u>LED</u>		<u>Selected mode</u>	<u>Selected by</u>	<u>Exit programming</u>		
5 seconds		SOS Function			LED flashes SOS or Alpine emergency Signal or Superflash		press button		
10 seconds	red LED lights	Setup Dim-level	red LED lights for 5 sec.		3 step with RVLR superflash mode	press button	automatically		
			yellow LED lights for 5 sec.		2 step	press button	jump to low level		
			green LED lights for 5 sec.		3 step	press button	jump to mid level		
			blue LED lights for 5 sec.		stepless level	press button	automatically		
		if 2 step dimming was selected							
		low dim level	red LED lights for 5 sec.		dim level = 5%	press button	automatically		
			yellow LED lights for 5 sec.		dim level = 10%	press button	automatically		
			green LED lights for 5 sec.		dim level = 30%	press button	automatically		
			blue LED lights for 5 sec.		dim level = 55%	press button	automatically		
		if 3 step dimming was selected							
mid dim level	red LED lights for 5 sec.		dim level = 5%	press button	automatically				
	yellow LED lights for 5 sec.		dim level = 10%	press button	automatically				
	green LED lights for 5 sec.		dim level = 30%	press button	automatically				
	blue LED lights for 5 sec.		dim level = 55%	press button	automatically				
low dim level	red LED lights for 5 sec.		dim level = 5%	press button	automatically				
	yellow LED lights for 5 sec.		dim level = 10%	press button	automatically				
	green LED lights for 5 sec.		dim level = 30%	press button	automatically				
	blue LED lights for 5 sec.		dim level = 55%	press button	automatically				
15 seconds	yellow LED lights	Setup capacity control	red LED lights for 5 sec.		Low	press button	automatically		
			yellow LED lights for 5 sec.		Middle	press button	automatically		
			green LED lights for 5 sec.		High	press button	automatically		
20 seconds	green LED lights	Setup Power	red LED lights for 5 sec.		Econo = Wilma 12 W	press button	automatically		
			yellow LED lights for 5 sec.		Normal = Wilma 14 W	press button	automatically		
			green LED lights for 5 sec.		Power = Wilma 17 W	press button	automatically		
25 seconds	blue LED lights	Setup SOS	red LED lights for 5 sec.		SOS	press button	automatically		
			yellow LED lights for 5 sec.		alpine emergency	press button	automatically		
			green LED lights for 5 sec.		Superflash	press button	automatically		
= factory defaults									